



Edge™ 205/305

owner's manual



© Copyright 2005–2006 Garmin Ltd. or its subsidiaries.

Garmin International, Inc.
1200 East 151st Street
Olathe, Kansas 66062, U.S.A.
Tel. 913/397.8200 or
800/800.1020
Fax 913/397.8282

Garmin (Europe) Ltd.
Unit 5, The Quadrangle
Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
Tel. 44/0870.8501241
Fax 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
Tel. 886/2.2642.9199
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, Auto Lap®, and Auto Pause® are registered trademarks and Edge™, GSC10™, Virtual Partner™, and Garmin Training Center™ are trademarks of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.



TABLE OF CONTENTS

Introduction.....	5	Using Speed Alerts	25
About This Manual	5	Using Heart Rate Alerts ...	26
Getting Started.....	6	Using Cadence Alerts	27
Charge the Battery	6	Virtual Partner.....	28
Position the Edge	10	Workouts: Quick, Interval,	
Configure the Edge	12	and Advanced	29
Acquire Satellite Signals .	13	Using Workouts	30
Position the Heart Rate		Quick Workouts	30
Monitor	14	Interval Workouts.....	33
Position the GSC10™		Advanced Workouts.....	34
Sensor	16	Courses	39
Set Your User Profile.....	19	Creating Courses.....	39
Set Your Bike Profile	20	Using Courses	40
Change the Backlight and		History	42
Contrast Settings	20	Viewing History	42
Training.....	22	Deleting History	45
Auto Pause/Lap	22	Navigation	46
Alerts	24	Navigating with the Map ..	46
Using Time and Distance		Marking and Finding	
Alerts	24	Locations	47
		Navigating with Routes....	49

Viewing GPS Information.....	51	Training with Heart Rate Zones.....	70
About GPS	52	Sensor Pairing	73
Customizing	53	Training with Cadence	75
Setting Up Custom Data		Barometric Altimeter	75
Fields	53	Garmin Training Center ...	76
Sample Data Field		Caring for the Edge	77
Configurations	54	Storage	77
Changing System Settings..		Water Immersion.....	78
55		Specifications	78
Updating User Profile.....	59	Replacing the Battery	80
Changing Bike Profile	59	Product Registration.....	81
Setting Zones.....	59	Contact Garmin.....	81
Speed Zones	59	Warning.....	82
Heart Rate Zones	60	Safety Information.....	82
Data Recording	62	Caution	83
Appendix	63	Limited Warranty	84
Edge Data Fields	63	FCC Compliance.....	85
Edge Accessories.....	69	Software License	
Viewing Heart Rate Data ..	70	Agreement.....	87
		CE Compliance	88
		Index	90

INTRODUCTION

Thank you for choosing the Garmin® Edge™! Track your cycling activities using this advanced GPS-enabled computer.

About This Manual

To get the most out of your Edge, review this manual and the *Edge Quick Reference Guide*.

Getting Started—charge your Edge, position and use the heart rate monitor and GSC10 speed and cadence sensor, and set up the Edge for your first ride.

Training—customize alerts and create workouts and courses on your Edge.

History—view and manage your Edge history data.

Navigation—learn about the navigating features of your Edge, including how to save and find locations, create routes, and view the satellite page.

Customizing—configure your Edge settings to fit your training needs.

Appendix—review specifications, cleaning instructions, information about Garmin Training Center™, and optional accessories. Be sure to read the safety information in this section to learn how to use your Edge safely and responsibly.

Index—contains a comprehensive index by subject.

GETTING STARTED

Follow the instructions in this section to set up and begin using your Edge.

Charge the Battery

The Edge is powered by a built-in lithium-ion battery that you can recharge with the A/C charger included in the product box. You can also charge the Edge with the USB cable and your personal computer. Charge the Edge for at least three hours before you begin using it.

WARNING: Be sure the mini-USB port, weather cap, and surrounding area are thoroughly dry before charging or connecting to a personal computer to prevent corrosion.

To charge the Edge:

1. Turn the Edge over and pull back the weather cap from the mini-USB port on the back of the unit.




mini-USB port under weather cap

2. Locate the A/C charger included in the product box. Plug the mini-USB end of the charger into the mini-USB port on the Edge. Then plug the A/C charger into a standard wall outlet.

NOTE: *The unit will not charge outside the temperature range of 0°C–50°C (32°F–122°F).*

3. Plug the A/C charger into a standard wall outlet. When the battery is completely charged, it can run for approximately 12 hours before recharging.

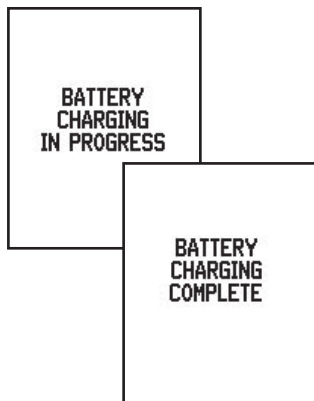

Buttons



1 power

- Press and hold to turn unit on/off.
- Press to turn backlight on/off.

2 mode

- Press to switch modes.
- Press to return to the previous page.
- Press and hold to switch bike profiles.

3 reset/lap

- Press and hold to reset the timer.
- Press to create a new lap.

4 start/stop

Press to start/stop the timer.

5 up/down ▲▼

- Press to highlight options.
- Press to scroll through menus and data fields.
- Press to adjust contrast when on the Satellite page.

6 enter

Press to select options and to acknowledge messages.

NOTE: Press **mode** and **reset/lap** simultaneously to reset the unit.

Icons

Battery icon shows the current battery charge level.



Satellite icon changes from blank to 3D when receiving satellite signals.



USB connection icon appears when Edge is connected to your PC using the USB cable.



Timer icon appears when timer starts.



Heart Rate icon is constant (no flashing X) when receiving data.



Cadence icon is constant (no flashing X) when receiving data.


Position the Edge

For best results, position the Edge with the face oriented toward the sky. This position allows the GPS antenna to acquire satellite information quickly.

You can install the bike mount to the stem or handlebars. The stem installation (shown here) provides a more sturdy location. The optional wedge should be used under the mount for a better viewing angle.

To install the Edge on your bike stem:

1. Place the wedge on the bike stem, and then place the bike mount on the wedge. Make sure the release lever is on the left.

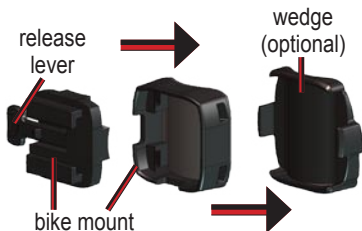

For horizontal bars: Separate and remove the top part of the mount, turn it 90 degrees, and replace. Continue with step 2.

For bars with a diameter less than 1 in (25.4 mm): Place the additional rubber pad under the bike mount to increase the diameter of the bar. The rubber pad also keeps the mount from slipping. Continue with step 2.

2. Attach the bike mount securely using two cable ties. Make sure the cable ties are threaded through both parts of the bike mount.
3. Align the Edge with the bike mount so that the unit is vertical.



4. Slide the unit left until it snaps into place.




Top view of Edge being mounted on a horizontal bar.

To release the unit:

Press down on the release lever, and slide the unit to the right.

Configure the Edge


When you first turn on your Edge, the following setup screens appear. Follow the on-screen instructions:

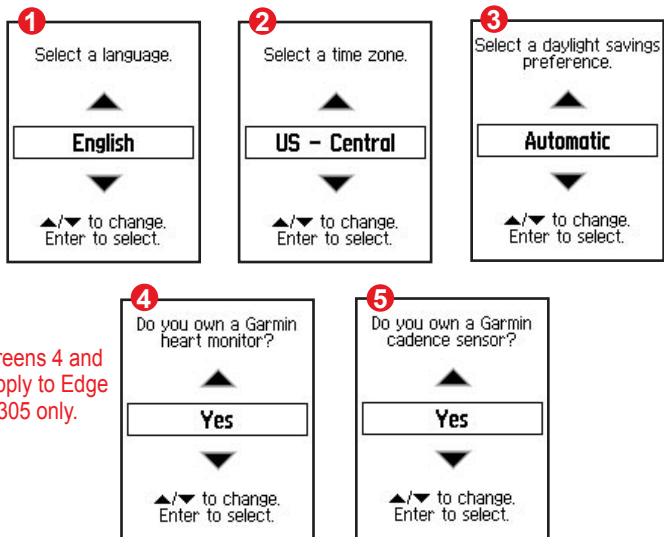


Acquire Satellite Signals

Before you begin using the Edge, you must acquire GPS satellite signals. It may take 30–60 seconds to acquire signals.

To acquire satellite signals:

Go outdoors to an open area. Then press and hold the **Power**  button to turn on the Edge.

On the Satellite page, the available satellites are flashing while the Edge searches for satellite signals. Acquired satellites and each corresponding bar below change to solid. The GPS accuracy appears at the top of the page.

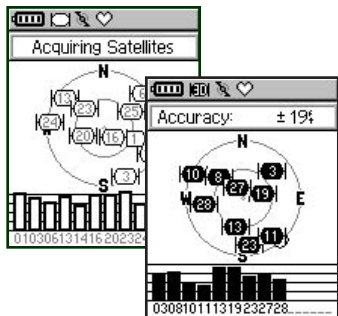

Wait while the Edge searches for satellites. For best reception, make sure the Edge is facing up. Stand still in an open area, and do not begin moving until the Satellite page disappears. After the Satellite page disappears, you can begin your ride.

NOTE: To turn off GPS receiver and use the Edge indoors, see [page 55](#).

Position the Heart Rate Monitor


NOTE: *The heart rate monitor is an accessory for the Edge 305 only.*


Wear the heart rate (HR) monitor directly on your skin, just below the breastplate. It should be snug enough to stay in place during your workout. To view heart rate information on your Edge during a workout, you must add it to the data fields on one of the data pages. See [page 53](#) for more

information on customizing the data fields on your Edge.

To use the heart rate monitor:

1. Push one tab on the elastic strap through the slot in the heart rate monitor.
2. Wet both sensors on the back of the heart rate monitor to create a strong connection between your pulse and the transmitter.

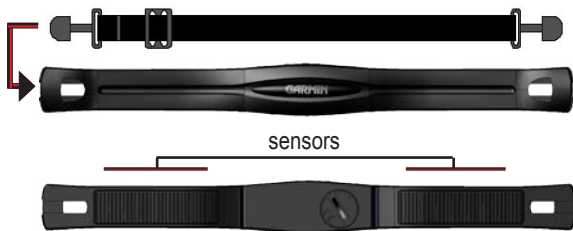

3. Place the heart rate monitor directly on your skin, just below the breastplate. Wrap the strap around your chest and attach the strap to the other side of the heart rate monitor.
6. Bring it within range (3 meters) of the heart rate monitor. The heart rate monitor automatically transmits your heart rate to the Edge, and the heart rate icon  changes from flashing to constant.

NOTE: *If you have trouble with erratic heart rate readings, position the transmitter on your back instead of your chest, or try applying electrode gel.*

4. Tighten or loosen the strap as necessary so that it fits snugly against your body.
5. Turn on the Edge.

TIP: *Be sure to move away from other heart rate monitors while the Edge is trying to “pair” with your heart rate monitor and begin receiving heart rate data. Once the Edge pairs with your heart rate monitor, you can go near other heart rate monitors. For more information on pairing, training, and troubleshooting, see [pages 70-74](#).*

Position the GSC10™ Sensor


NOTE: The GSC10 is an accessory for the Edge 305 only.

The Edge 305 CAD includes a wireless speed and cadence sensor. Both magnets must be aligned with their respective indication line for the Edge to receive data.

To install the GSC10:


1. Place the GSC10 on the rear chain stay. Loosely attach the GSC10 using two cable ties.

1 GSC10 on rear chain stay

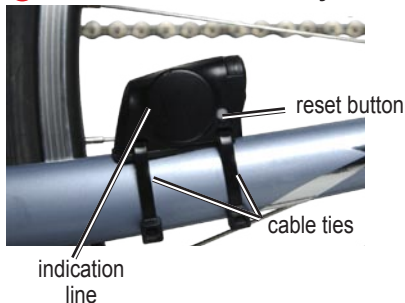

2. Attach the pedal magnet to the crank arm using the adhesive mount and a cable tie. Make sure the pedal magnet is within 5 mm of the GSC10 and the indication line on the pedal magnet lines up with the indication line on the GSC10.
3. Attach the spoke magnet by unscrewing the magnet from the plastic piece. Then place the spoke in the groove of the plastic piece and tighten slightly. The magnet can face away from GSC10 if there is not enough room between sensor arm and spoke. Make sure the magnet is aligned with the sensor arm indication line.

2 pedal magnet on crank arm

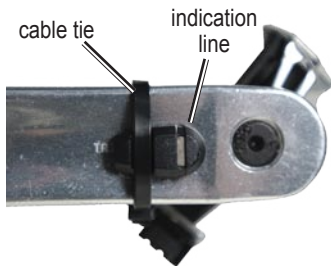


4. Unscrew and move the sensor arm to within 5 mm of the spoke magnet. You can also tilt the GSC10 closer to either magnet for improved alignment.

5. Press the **Reset** button on the GSC10. The LED light turns red, then green. Pedal to test the sensor alignment. The red LED blinks each time the crank arm passes the sensor, and the green LED blinks each time the wheel magnet passes the sensor arm.

NOTE: The LED blinks for the first 60 passes after a reset. Press **Reset** again if you require additional passes.


6. When everything is aligned and working correctly, tighten the cable ties, sensor arm, and spoke magnet.

3 spoke magnet on wheel

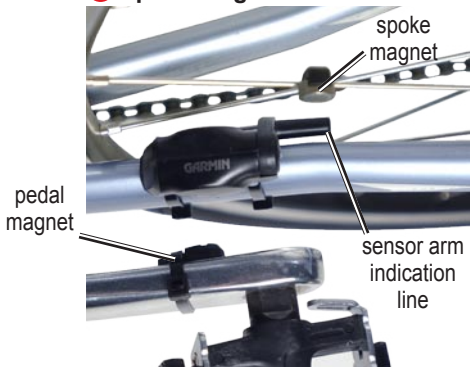

Set Your User Profile

The Edge uses information that you enter about yourself to calculate calorie consumption. Set your user profile before you begin using the Edge to ensure it is recording accurate workout data.

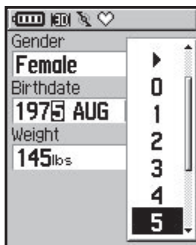

To set your user profile:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > User Profile**.
3. Enter your **Gender**, **Birth Date**, and **Weight**.

TIP: When finished selecting options or entering values on your Edge, press the **mode** button to exit the field or page.

If you are setting your user profile for the first time (Edge 305 with heart rate monitor), a Max HR message appears. Select **Yes** to adjust your maximum heart rate calculation based on your user profile.

Set Your Bike Profile

You can set up to three profiles.

To set your bike profile:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Bike Profile**.



3. Select the bike profile you wish to use.
4. Enter the **Bike Weight**.


5. If you have an Edge 305 with the GSC10 speed and cadence sensor on your bike, select the **Sensor Mounted** check box.
6. In the **Wheel Size** field, select **Auto** to have the GSC10 automatically detect your tire size using GPS data or select **Custom** to enter your tire size.

Change the Backlight and Contrast Settings

To change the Edge display:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > Display**.

3. Select the amount of time the backlight stays on. Use a short backlight timeout setting to conserve battery power.
4. Select the amount of screen contrast.

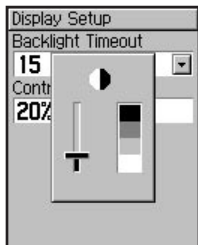

NOTE: You can also adjust the screen contrast on the Satellite page using the ▲▼ arrows.

TRAINING

The Edge offers several training features and optional settings. Use your Edge to set goals and alerts, train with a Virtual Partner™, program workouts, and plan courses based on existing rides.

Auto Pause/Lap

You can set the Edge to pause the timer automatically during your ride when you stop moving or your speed drops below a custom value. This setting is helpful if your course includes stop lights or other places where you need to slow down or stop.

When you turn on Auto Pause, the Edge stores any paused time as Rest Time and any paused

distance as Rest Distance. To add these data fields to a custom page, see [page 53](#).

NOTE: *Rest time and rest distance for Auto Pause are not stored in history.*

You can use the Auto Lap Trigger feature to automatically mark the lap at a specific position or after you have traveled a specific distance. This setting is helpful for comparing your performance over different parts of a ride (each 5 or a major hill, for example).

To set Auto Pause/Lap:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Auto Pause/Lap**.

3. In the **Auto Timer Pause** field, select **When Stopped** or **Custom Speed** to enter a value.

Auto Pause/Lap	
Auto Timer Pause:	
Custom Speed	
Pause When:	
0.2 ^m	
Auto Lap Trigger:	
By Distance	
Lap At:	
1.00 ^m	

4. In the **Auto Lap Trigger** field, select **By Distance** to enter a value or **By Position** to choose an option:

- **Lap Press only**—triggers the lap counter each time you press the **lap** button and every time you pass that location again.

- **Start And Lap**—triggers the lap counter at the GPS location where you press the **start** button and at any locations during the ride where you press the **lap** button.
- **Mark And Lap**—triggers the lap counter at a specific GPS location marked before the ride and at any locations during the ride where you press the **lap** button.

Auto Pause/Lap	
Auto Timer Pause:	
Off	
Auto Lap Trigger:	
By Position	
Lap At:	
Mark And Lap	
Mark Position	

Alerts


Use Edge alerts to train toward certain time, distance, speed, heart rate, and cadence goals.

Using Time and Distance Alerts

Time and distance alerts are useful for long workouts when you want to train for a certain amount of time or distance. When you reach your goal, the Edge beeps and displays a message.

To set a time or distance alert:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Alerts > Time/Dist Alert**.

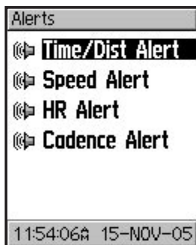

3. In the **Time Alert** field, select **Once** or **Repeat**.
4. Enter a time in the **Alert At** field.



5. In the **Distance Alert** field, select **Once** or **Repeat**.
6. Enter a distance in the **Alert At** field.

Using Speed Alerts

Speed alerts notify you if you exceed or drop below a custom speed setting during your ride.

The speed alert takes advantage of Speed Zones, which are ranges of speed that you can store in the Edge. For more information, or to set your Speed Zones, see [page 59](#).

To set a speed alert:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Alerts > Speed Alert**.
3. In the **Fast Speed Alert** field, select a Speed Zone from the menu or select **Custom** to enter your own alert value.



The screenshot shows a 'Speed Alert' menu with two sections. The 'Fast Speed Alert' section has a dropdown menu currently showing 'Descent' and an 'Alert Above:' field with the value '32.0^m'. The 'Slow Speed Alert' section has a dropdown menu currently showing 'Custom' and an 'Alert Below:' field with the value '2.0^m'.

4. Repeat for the **Slow Speed Alert**.

Using Heart Rate Alerts

NOTE: Heart rate alerts are a feature of the Edge 305 only.

Similar to speed alerts, the heart rate alert notifies you if your heart rate exceeds or drops below a specific number of beats per minute (bpm).

Heart rate alerts can also notify you if your heart rate exceeds or drops below a certain heart rate zone—a range of beats per minute. The five commonly accepted heart rate zones can help you determine the intensity of your workout. For more about setting your heart rate zones, see [page 60](#). For more information about training with heart rate zones, see [page 70](#).

To set a heart rate alert:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Alerts > HR Alert**.
3. In the **Min HR Alert** field, select a zone from the menu or select **Custom** to specify your own alert value.



Heart Rate Alert	
Min HR Alert:	<div>Custom</div>
Alert Below:	<div>60bpm</div>
Max HR Alert:	<div>Custom</div>
Alert Above:	<div>180bpm</div>

4. Repeat for the **Max HR Alert**.
The maximum value allowed is 235 bpm.

NOTE: When entering custom heart rate values, you must set your minimum and maximum alerts at least 5 bpm apart.

Using Cadence Alerts

NOTE: Cadence alerts are a feature of the Edge 305 only.

Similar to speed alerts, the cadence alert notifies you if your cadence exceeds or drops below a specific number of revolutions of the crank arm per minute (rpm). For more information about training with cadence, see [page 75](#).


To set a cadence alert:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Alerts > Cadence Alert**.
3. In the **Fast Cadence Alert** field, select **On**.
4. Enter a value in the **Alert Above** field. The maximum cadence value allowed is 255.



5. Repeat for the **Slow Cadence Alert**.

Virtual Partner

Your Virtual Partner  is a unique tool designed to help you meet your training goals. The Virtual Partner competes with you during quick workouts and courses. The Virtual Partner “rides” alongside (top bike graphic) of you. Your current time, speed, distance, and distance from the Virtual Partner appears on the Workout page. If you are ahead of the Virtual Partner, the bottom field background is white. If you are behind, the background is black (as shown).

To see Virtual Partner data:

1. Set up a quick workout or course.
2. Press **mode** to see the Workout or Course page.
3. Press **start**.
4. Press **enter** to scroll through the workout or course data pages.




Virtual Partner
You

To turn off Virtual Partner:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Virtual Partner**.
3. In the **Virtual Partner** field, select **Off**.

**Workouts: Quick, Interval, and Advanced**

From the **Main Menu**, select **Training > Workouts** to choose the type of workout right for you.

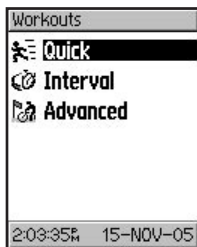

Quick and interval workouts are replaced each time you create a workout of the same type. Advanced workouts can be saved, edited, and transferred between Training Center and your Edge.

Using Workouts

During your workout, press **mode** to see the Workout data page. When you complete all steps in your workout, the “Workout Finished!” message appears.

To end a workout early:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Stop Workout**.

To end a workout step early:

Press the **lap/reset** button.

Quick Workouts

It is easy to set up a challenging workout with your Edge based on the following criteria:

- Distance and time
- Time and speed
- Distance and speed



To set up a quick workout by distance and time:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Workouts > Quick Workouts > Dist & Time**.
3. Enter values in the **Distance** and **Time** fields.
4. Check the Speed field to ensure that the calculated speed (based on your distance and time values) seems reasonable. If not, make changes to the Distance and Time fields.
5. Select **Done**.
6. Press **start** to begin your workout.



To set up a quick workout by time and speed:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Workouts > Quick Workouts > Time & Speed**.
3. Enter values in the **Time** and **Speed** fields.
4. Check the **Distance** field to ensure that the calculated distance (based on your time and speed values) seems reasonable. If not, make changes to the **Time** and **Speed** fields.
5. Select **Done**.
6. Press **start** to begin your workout.

To set up a quick workout by distance and speed:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Workouts > Quick Workouts > Dist & Speed**.
3. Enter values in the **Distance** and **Speed** fields.
4. Check the **Time** field to ensure that the calculated time (based on your distance and speed values) seems reasonable. If not, make changes to the **Distance** and **Speed** fields.
5. Select **Done**.
6. Press **start** to begin your workout.

Interval Workouts

You can create simple and challenging interval workouts with your Edge based on the following criteria:

- Ride a certain distance and rest for a certain amount of time.
- Ride for a certain distance and rest for a certain distance.
- Ride for a certain amount of time and rest for a certain amount of time.
- Ride for a certain amount of time and rest for a certain distance.

To create an interval workout:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Workouts > Interval**.
3. Select an option from the Interval Workout page according to how you want to set up intervals.
4. Enter distance or time values into the appropriate fields.
5. In the **Reps** field, enter number of times you want to repeat each interval.
6. Select **Done**.



Interval Workout
Distance:
5.00 ^m
Rest Time:
00:01:00
Reps:
4
Done?

7. Press **start** to begin your workout.

An audible alarm sounds when you reach a rest lap, and a message appears, counting down the rest time or distance until a new interval lap begins. During the rest lap, another audible alarm sounds when you are within 5 seconds or 20 meters (~ 65 feet) of resuming your workout.

Advanced Workouts

Your Edge allows you to create and save advanced workouts that include goals for each workout step and varied distances, times, and rest laps. Once you create and save a workout, you can use the Training Center software to schedule the workout for a particular day. Scheduling allows you save setup time by planning workouts in advance and storing them on your Edge. For more information about installing Training Center, see [page 76](#).

Creating Advanced Workouts

Garmin recommends that you use the Training Center software to create workouts and transfer them to your Edge. However, you can create and save an advanced workout directly on your Edge if you wish. Note that you cannot use the Edge to schedule workouts; you must use Training Center.

To create an advanced workout using the Edge:

1. Press **mode** to access the **Main Menu**. Select **Training**.
2. Select **Workouts** > **Advanced** > **<Create New>**.
3. Enter a descriptive workout name in the top field (for example, **40KHILLS**).

4. Select **"1. Open No Target."**
Select **Edit Step**.

Workout Step	
Duration	Open
Until Lap Is Pressed	
Target	Speed
	Climb 4
1.00^m	To 4.00^m
Rest Lap	Yes

5. In the **Duration** field, select how long you want the step to last. If you select **Open**, you can end the step during your workout by pressing **lap**.
6. Below **Duration**, enter the value where you want the step to end.

7. In the **Target** field, select your goal during the step (Speed, Heart Rate, Cadence, or None).

NOTE: Heart rate and cadence targets are for the Edge 305 only.

8. Enter a target value from the menu. For example, if your target is heart rate, select a heart rate zone or enter a custom range. Select **None** if you do not want to set a target for this step.
9. Below **Target**, enter a goal value for this step (if necessary).

10. If this is a rest lap, select the **Rest Lap** field, and then select **Yes**. (Creating rest laps affects your workout history; see “Viewing Workout History.”)

11. Press **mode** to continue setting up this workout.
12. To enter another step, select **<Add New Step>**. Then repeat steps 5–11.

To repeat steps:

1. Select **<Add New Step>**.
2. In the **Duration** field, select **Repeat**.
3. In the **Back to Step** field, select the step you want to return to.
4. In the **Number of Reps** field, enter the number of repetitions.

Workout Step	
Duration	Repeat
Back To Step	1
Number Of Reps	3

5. Press **mode** to continue.

Starting Advanced Workouts

Once you begin an advanced workout, the Edge displays each step of the workout, including the name of the step, the goal (if any), and current workout data.

To start an advanced workout:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Workouts > Advanced**.
3. Select the workout you want to start.
4. Select **Do Workout**.
5. Press **start** to begin your workout.

NOTE: During the workout, press the **enter** button to view more data pages.

An audible alarm sounds when you are about to finish a workout step. A message appears, counting down the time or distance until a new step begins.

Editing Advanced Workouts

You can edit workouts within Training Center or directly in the Edge. However, if you edit workouts in the Edge, your changes may be temporary. Training Center serves as the “master list” of workouts: if you edit a workout in the Edge, the changes will be overwritten the next time you transfer workouts from Training Center. To make a permanent change to a workout, edit the workout in Training Center and then transfer it to your Edge.

To edit an advanced workout:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Workouts > Advanced**.
3. Select the workout you want to change. Select **Edit Workout**.
4. Select the step you want to edit. Select **Edit Step**.
5. Make any necessary changes, and press **mode**.
6. Edit other steps as necessary.
7. Press **mode** to exit.

To delete an advanced workout:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Workouts > Advanced**.

3. Select the workout you want to delete. Select **Delete Workout**.
4. Select **Yes** to delete the workout.

Courses

Another way you can use the Edge for custom training is to create and edit courses based on a previously recorded activity. You can race against the course trying to match or exceed previously set goals. You can also race against the Virtual Partner when training with courses. To turn on Virtual Partner, see [page 28](#).

Creating Courses

Garmin recommends that you use the Training Center software to create courses and course

points. Then you can transfer them to your Edge. For more information, see the Training Center Help system.

You can also create a course (without course points) on your Edge.

To create a course on your Edge:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Courses > <Create New>**.
3. From the History page, select a previous ride on which to base your course.
4. Enter a descriptive course name in the top field (for example, **10KFLAT**).
5. Press **mode** to exit.

Using Courses

Once you begin a course, press **mode** to see the Course data page. Press **enter** to view additional pages of course data.

Course	
Time	00:42:35
Speed	Distance
0.0 ^m _h	13.2 ^m _i
Dist To Go	Time To Go
0 ^f _t	--:--
Crs Pt Dist	Max Speed
 -- ^m _i	23.7 ^m _h

To start a course:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Courses**.

3. Select the course you want to start.
4. Select **Do Course**.
5. Press **start** to begin your course.

To end a course manually:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Stop Course**.

To edit a course name:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Courses**.
3. Select the workout you want to change. Select **Edit Course**.
4. Edit the course name, and press **mode** to exit.

To delete a course:

1. Press **mode** to access the **Main Menu**.
2. Select **Training > Courses**.
3. Select the course you want to delete. Select **Delete Course**.
4. Select **Yes** to delete the course.

HISTORY

Your Edge automatically saves all training data (when the timer is started) and can hold up to two years (1000 laps) of data in memory. When the memory is full, your oldest Edge data is overwritten. Load your history into the Training Center software periodically to keep track of all of your workouts. You can view the data on your Edge or transfer the history to the Training Center software, where you can analyze your data.

History data includes time, distance, calories, average speed, maximum speed, altitude, and detailed lap information. Edge 305 history data also includes heart rate and cadence.

No data is saved when the timer is stopped.

Viewing History

After you have finished a ride, you Edge stores history data that you can view by day, week, or totals.

To view history by day:

1. Press **mode** to access the **Main Menu**.
2. Select **History > By Day**.
3. Press ▼ to scroll through the list. As you scroll, summary details appear below the list.
4. Select an entry to view details. Select **View Laps** for additional lap detail.

About Lap Detail

The Edge displays history details differently, depending on the type of training you did. Details of a quick workout appear on one summary page. Details of Virtual Partner, interval workouts, advanced workouts, and courses appear with tabs, which organize information into sections. To view information on different tabs, press the ▲ and ▼ arrows.



To view laps on map:

1. While viewing details for a history entry, select **View Laps**.
2. Select a lap in the list.
3. Select **View on Map**.



4. Press the ▲ and ▼ arrows to zoom in and out on the map. When you are finished viewing the lap, select **Next** to view the next lap. Press **mode** to exit.



To delete laps or entire trips from history:

1. While viewing details for a history entry, select **View Laps**.
2. Select the lap you want to delete.
3. Select **Delete Lap** or **Delete Entire Trip**. Select **Yes** to confirm.

NOTE: To delete more or all of your Edge history, see “Deleting History” on [page 45](#).

To view history by weeks:

1. Press **mode** to access the **Main Menu**.
2. Select **History > By Week**.
3. Press ▼ to scroll through the list of weeks. As you scroll, totals for each week appear below the list.
4. Select a week to view details in that week by day.

To view history totals:


1. Press **mode** to access the **Main Menu**.
2. Select **History > History Totals**. Totals appear for distance, time, and calories for all of your saved workouts.
3. Select **View Weeks** to see a list of weeks.

Deleting History

After you have transferred several months of Edge data to Training Center, you may want to delete the history from your unit.

To delete workout history:

1. Press **mode** to access the **Main Menu**.
2. Select **History > Delete**.

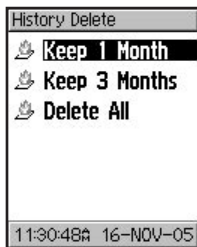

3. Select **Keep 1 Month**, **Keep 3 Months**, or **Delete All**. Select **Yes** to confirm.

NAVIGATION

Use the GPS navigation features of your Edge to view your ride on a map, mark and save locations you want to remember, and create routes.



Navigating with the Map

Press **mode** to see the Map page. Once you start the timer and begin to move, a tiny dotted line appears on the map, showing

you exactly where you have traveled. This dotted line is called a track. At the bottom of the map, you can view the zoom level. To zoom in or out on the map, press the **▲** and **▼** **arrows**. At the top of the map, you can view the direction you are traveling. At the top of the map, you can add custom data fields. See [page 53](#).



Marking and Finding Locations

A location is a point on the map that you store in memory. If you want to remember landmarks or return to a certain spot, mark a location there. The location appears on the map with a name and symbol. You can find, view, and return to locations at any time.

To mark your location:

1. Go to a place where you want to mark a location.
2. Press **mode** to access the **Main Menu**.
3. Select **Navigation > Mark Location**.



4. Enter a descriptive location name in the top field (for example, **CITY PARK**). You can also change the symbol in the top left field.
5. Select **OK**.


To find and go to a Location:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Find**.


- Use the ▲ and ▼ **arrows** to select the location from the list. As you scroll, direction and distance information for each location appears below the list.



- Select the location.
- Select **Go To**. A straight line on the map directs you to the location.

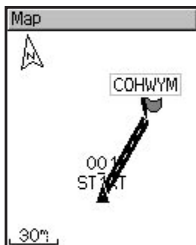

- Press **mode** to view the Compass page.

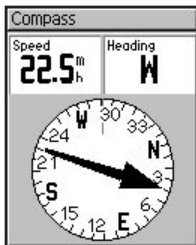

To stop navigating to a location:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Stop GoTo**.

To edit a location:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Find**.
3. Select the location.
4. Select the name or symbol, and make any necessary changes.
5. Press **mode** to exit.

To delete a location:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Find**.
3. Select the location.

4. Select **Delete**. Select **Yes** to confirm.


Navigating with Routes

A route provides straight line directions between two or more points on the map. After you create locations, you can use these points to build routes. Then you can save the routes and use them to navigate at any time. The Compass page also appears for routes.

To create a route:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Routes**.
3. Select **New** to add a location to your route. Press **enter**.

4. Select the location from the list, and then select **Use**.
5. Repeat steps 3 and 4 to add more locations to your route.
6. When you are finished adding locations, select **Navigate**.
7. Press **start/stop**. Your route appears on the Map page as a dark line connecting each location.

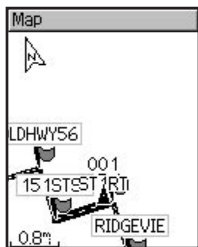

To find and follow a route:

1. Press **mode** to access Menu mode.
2. Select **Navigation > Routes**.
3. Select the route you want to follow. Select **Navigate**.
4. Press **start/stop**. Your route appears on the Map page as a dark line connecting each location.

To stop navigating a route:

1. Press **mode** to access the **Main Menu**.
2. Select **Navigation > Stop Route**.

To edit a route:

1. Press **mode** to access Menu mode.
2. Select **Navigation > Routes**.

3. Select the route you want to edit. A menu appears.
4. Select **Edit**. Then select a point to edit.

Review—view it on the map.

Insert—insert a point before this point.

Remove—remove it from the route.

Change—replace it with another point

Move—move it to another place in the route.

5. When you are finished making changes, select **Navigate** or press **mode** to exit.


To delete a route:

1. Press **mode** to access Menu mode.
2. Select **Navigation > Routes**.

3. Select the route you want to delete. A menu appears.
4. Select **Delete**. Select **Yes** to confirm.

Viewing GPS Information

The Satellite page displays information about the GPS signals the Edge is currently receiving. Press **mode** to access the Satellite page.

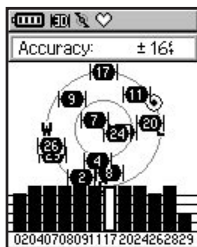

Each GPS satellite in space has a specific number that identifies it. The numbers of several GPS satellites appear on the circular graphic in the middle of the page. The number corresponds to the current position of that satellite in space. Each highlighted number on the graphic corresponds to a satellite from which the Edge is currently receiving signals. The black bars under the graphic represent the strength of each satellite signal received (the number of the satellite appears below each bar).

About GPS

The Global Positioning System (GPS) is a satellite-based navigation system made up of a network of 24 satellites placed into orbit by the United States Department of Defense. GPS was originally intended for military applications, but in the 1980s, the government made the system available for civilian use. GPS works in any weather conditions, anywhere in the world, 24 hours a day. There are no subscription fees or setup charges to use GPS.

For more information, visit www.garmin.com/aboutGPS.

CUSTOMIZING

You can customize data fields, general settings, bike and user profiles, heart rate and speed zones, and data recording.

TIP: When finished selecting options or entering values on your Edge, press the **mode** button to exit.

To open the Setup Menu page:
Press **mode** to access the **Main Menu**. Select **Settings**.



Setting Up Custom Data Fields

You can set up custom data fields for the following Edge pages:

- Bike Computer 1
- Bike Computer 2
- Map
- Workouts
- Courses

For a complete listing of the available data fields for your Edge, see [pages 63-68](#).

To set data fields:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Data Fields**.
3. Select one of the pages listed.

4. Select the number of data fields you want to see on this page.
5. Use the **▲** and **▼** **arrows** and **enter** key to change the data fields. Press **mode** when done.



6. Repeat for each page you wish to customize.

Sample Data Field Configurations



Default data fields for Bike Computer 1 page




Optional data fields for Bike Computer 1 page

Changing System Settings

System settings you can configure to suit your training preferences include general Edge setup, display, map, units, time, and accessories.

To change general setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > General**. From this page, you can change the **GPS** mode, **Text Language**, **Tones**, and **Page Mode Options**.

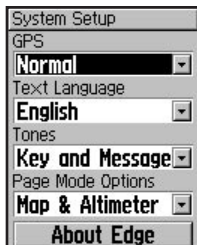


To use the Edge indoors:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > General > GPS**.
3. Select **GPS Off**.

NOTE: When GPS is off, speed and distance data are not available, unless you are using the Edge 305 with the GSC10. The next time you turn on the Edge, it will search for satellite signals again.

To change display setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > Display**.
3. From this page, you can change the **Backlight Timeout** and **Contrast**.

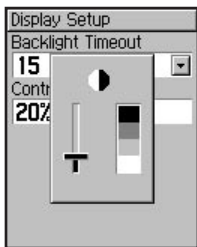

To change map setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > Map**.
3. Select the map **Orientation**:
North Up—display the map with North at the top.
Track Up—display the map with your direction of travel at the top.
4. You can also choose to show or hide **User Waypoints** on the Map page.



To change units setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System.> Units**.
3. Select **Statute** or **Metric** for your Edge data.

4. (Edge 305 only). Select **Beats per Minute** or **% Max HR** for your heart rate data. For more information on heart rate data, see [pages 70-74](#).



To change time setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > Time**.
3. From this page, you can change the **Time Format**, **Time Zone**, and **Daylight Saving Time**.




To turn off or restart scanning for Edge 305 accessories:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > System > Accessories**.
3. In the **Heart Monitor** or **Cadence Sensor** fields, select **No** to turn off the accessory.

Or

Select **Restart Scan** if you are having trouble receiving heart rate or cadence data. Make sure there are no other sensors around you.

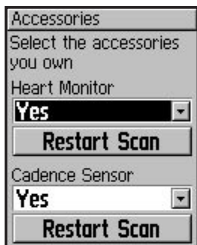

Updating User Profile

To update your user profile, see [page 19](#).

Changing Bike Profile

You can save up to three bike profiles on the Edge.

To change your bike profile:

1. Press **mode** to access the **Main Menu**.

2. Select **Settings > Bike Profile**.
3. Select the bike profile you wish to use.
4. Make changes to the profile, if necessary. See [page 20](#).
5. Press **mode** to exit.

Setting Zones

From the **Main Menu**, select **Settings > Zones** to set up Edge speed and heart rate zones.

Speed Zones

Your Edge contains several different speed zones, ranging from very slow (Climb 4) to very fast (Max Speed). The values for these speed zones are entered by default and may not match your personal abilities. After you enter appropriate speed zones,

you can use these zones to set your speed alerts or use them as targets in advanced workouts. For more about alerts, see [page 24](#). For more about advanced workouts, see [page 34](#).

To change your speed zones:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Zones**.
Edge 305 users must also select **Speed Zones**.

Zones		
Climb 4		
1.0 ^m _h	-	4.0 ^m _h
Climb 3		
4.0 ^m _h	-	8.0 ^m _h
Climb 2		
8.0 ^m _h	-	12.0 ^m _h
Climb 1		
12.0 ^m _h	-	16.0 ^m _h

3. Select the zone you want to change. Enter a minimum speed for that zone. Then enter a maximum speed for that zone.
4. Repeat step 2 for each zone you want to change.
5. Press **mode** to exit.

Heart Rate Zones

A heart rate zone is a specified range of heart beats per minute. Heart rate zones are generally based on a percentage of your maximum heart rate. These zones are numbered from 1 to 5 based on intensity (1—lowest, 5—highest).

If you know your maximum heart rate, you can enter it and allow the Edge to calculate your heart rate zones automatically. You can

also enter your heart rate zones manually.

To base heart rate zones on your max HR:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Zones > HR Zones**.

Zones		
Max:	190bpm	
Zones	Based on Max	
1	95bpm	114bpm
2	114bpm	133bpm
3	133bpm	152bpm
4	152bpm	171bpm
5	171bpm	190bpm

3. Select the **Max** field, and enter your maximum heart rate.

4. Select the **Zones** field, and select **Based on Max**.

To change your heart rate zones manually:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Zones > HR Zones**.
3. Select the **Zones** field, and select **Custom**.
4. Select any heart rate zone, and select a heart rate value you want to change. Enter a heart rate value.
5. Repeat step 3 for each heart rate zone you want to change.
6. Press **mode** to exit.

Data Recording

Data recording controls how the Edge records detailed data for your rides. By default, the Edge uses Smart Recording to record your movements and create detailed history. Smart Recording picks up key points where you change direction, speed, or heart rate.

You can also record data every second. Doing so creates the most accurate record possible of your ride. However, with this setting, the Edge can only record up to 3.5 hours of detailed data.

WARNING: *When the history is full, older history data is overwritten automatically. Be sure to transfer history to Training Center often.*

To change data recording setup:

1. Press **mode** to access the **Main Menu**.
2. Select **Settings > Data Recording**.
3. In the **Record Data Points** field, select **Every Second** or **Smart Recording**.
4. Press **mode** to exit.

APPENDIX

Edge Data Fields

The following table lists all of the Edge data fields and descriptions.

* Denotes a field showing statute or metric units. To change your Edge unit settings, select **Main Menu > System > Settings > Unit**.

Data Field	Description	Edge 205	Edge 305
Cadence	Revolutions of the crank arm per minute.		•
Cadence - Avg	Average cadence for the duration of your current ride.		•
Cadence - Lap	Average cadence for current lap.		•
Calories	Amount of calories burned.	•	•
Distance *	Distance traveled on current ride.	•	•

Data Field	Description	Edge 205	Edge 305
Dist – Lap *	Distance traveled in current lap.	●	●
Dist – Last Lap *	Distance of last completed lap.	●	●
Dist – Paused *	Distance covered while timer in Auto Pause.	●	●
Elevation *	Distance above/below sea level.	●	●
GPS Accuracy *	Margin of error for your exact location. For example, your GPS location is accurate to within +/- 19 ft.	●	●

Data Field	Description	Edge 205	Edge 305
Grade	Calculation of rise over run. For example, if for every 10 foot you climb (elevation) you travel 200 feet (distance), your grade is 5%.	•	•
Heading	Current direction you are traveling.	•	•
Heart Rate	Heart beats per minute (bpm).		•
Heart Rate – Avg	Average heart rate for the duration of your current ride.		•
Heart Rate – Lap	Average heart rate in current lap.		•

Data Field	Description	Edge 205	Edge 305
Heart Rate Zone	Current range of heart rate (1–5). The default zones are based on your maximum heart rate and user profile.		•
Laps	Number of laps completed.	•	•
Speed *	Current speed.	•	•
Speed – Avg *	Average speed (mph or kph) for the duration of your current ride.	•	•
Speed – Lap *	Average speed in current lap.	•	•
Speed – Max *	Top speed achieved during current ride.	•	•

Data Field	Description	Edge 205	Edge 305
Speed Zone	Current range of speed based on default or custom settings: Climb 1–4, Flat 1–3, Descent, Sprint, and Max Speed.	•	•
Sunrise	Approximate time of sunrise based on your GPS position.	•	•
Sunset	Time of sunset based on your GPS position.	•	•
Time	Stopwatch time.	•	•
Time – Avg Lap	Average time to complete the laps so far.	•	•
Time – Lap	Amount of time in current lap.	•	•
Time – Last Lap	Length of time to complete the last full lap.	•	•

Data Field	Description	Edge 205	Edge 305
Time – Paused	Time elapsed while timer in Auto Pause.	•	•
Time of Day	Current time of day based on your time settings (format, time zone, and daylight saving time).	•	•
Total Ascent *	Total elevation gain for current ride.		•
Total Descent *	Total elevation lost for current ride.		•

Edge Accessories

Accessory	Part Number
GSC10 speed and cadence sensor	010-10644-00
Heart rate monitor and strap	010-10645-00
Cigarette lighter adapter	010-10563-00
HRM elastic strap replacement	010-10714-00
Carry case	010-10718-00
Mount replacement kit	010-10725-00
GSC10 magnet replacement kit	010-10729-00
AC wall brick charger (Americas)	010-10635-00
AC wall brick charger (Europe)	010-10635-01
USB cable replacement	010-10477-03

To purchase additional accessories for your Edge, go to the Garmin Web site: <http://shop.garmin.com>.

Viewing Heart Rate Data

You can configure your Edge to display different heart rate data: current heart rate, average heart rate, and heart rate zone, which can help you determine the intensity of your training. For example, you can add heart rate to your Bike Computer page or heart rate zone to your Workout page.

To add or modify data fields, see [page 53](#).

For a complete listing of available data fields, see [page 63](#).

Heart rate information is also displayed as history data. Read more about history on [page 42](#).

Training with Heart Rate Zones

Many cyclists and other athletes are using heart rate zones to measure and increase their cardiovascular strength and improve their level of fitness.

What are heart rate zones?

A heart rate zone is simply a range of heartbeats per minute (bpm). The five commonly accepted heart rate zones are numbered from 1–5 according to increasing intensity. Generally, heart rate zones are calculated based on percentages of your maximum heart rate. See Table 1 on [page 72](#) to learn some of the effects of exercise as your heart rate reaches each of these zones during a workout.

How do heart rate zones impact your fitness goals?

Knowing your heart rate zones can help you measure and improve your fitness by understanding and applying these principles:

- Your heart rate is a good measure of exercise intensity.
- Training in certain heart rate zones can help you improve cardiovascular capacity and strength.
- Knowing your heart rate zones can prevent you from overtraining and decrease your risk of injury.

See Table 1 on [page 72](#) to learn about the benefits of training in each heart rate zone.

How can I determine my heart rate zones?

If you know your maximum heart rate, you can enter it and allow the Edge to calculate your heart rate zones based on the percentages shown in Table 1 on [page 72](#). For more information on setting your heart rate zones, see [page 60](#).

Table 1

Zone	% of Max. Heart Rate	Perceived Exertion	Benefits
1	50%–60%	Relaxed, easy pace; rhythmic breathing	Beginning-level aerobic training; reduces stress
2	60%–70%	Pace comfortable; slightly deeper breathing, conversation possible	Basic cardiovascular training; good recovery pace
3	70%–80%	Pace moderate; more difficult to hold conversation	Improved aerobic capacity; optimal cardiovascular training
4	80%–90%	Pace fast and a bit uncomfortable; breathing forceful	Improved anaerobic capacity and threshold; improved speed
5	90%–100%	Pace a sprinting effort, unsustainable for long period of time; labored breathing	Anaerobic and muscular endurance; increased power

Sensor Pairing

What is pairing?

Pairing is the process of matching sensors, like your heart rate monitor and GSC10, with your Edge 305. This process occurs automatically when you turn on the Edge and only takes a few seconds when the sensors are on and functioning correctly. Once paired, your Edge will only receive data from your sensor.

How does it work?

Upon power up, the Edge will automatically scan for the sensors you have enabled during initial setup (see [page 12](#)) or accessories setup (see [page 58](#)). Each sensor has a unique ID. The Edge learns and saves this unique ID while pairing the first time. The next time you turn the Edge on, it will only pair with the unique sensor ID. If the Edge does not find the sensor, you should restart the scan to find your sensor ID.

Pairing Tips

If you have trouble pairing, or if the readings are erratic, try the following suggestions:

- Position the Edge within 3 meters of the sensor while pairing.
- Stay far away from any other sensors while pairing.
- Restart scan if your Edge appears to be paired with another sensor (see [page 58](#)).
- Make sure to enable the sensors on the Edge (see [page 58](#)).
- Make sure the sensors are functioning correctly.
- Replace the sensor battery.

- Clean the sensors. Dirt and sweat build-up on the sensors can weaken signals.

For heart rate monitor only:

- Reapply moisture. Use electrode gel, water, or saliva.
- Make sure the heart rate monitor is snug against your body. If you have trouble with erratic readings, position the transmitter on your back.
- Wear a cotton shirt, or wet your shirt. Synthetic fabrics that rub or flap against the heart rate monitor can create static electricity that interferes with heart rate signals.

Training with Cadence

Cadence is your rate of pedaling or “spinning” measured by the amount of revolutions of the crank arm per minute (rpm).

There are two sensors on the GSC10: one for cadence and one for speed. Cadence data from the GSC10 is always recorded. The speed data from the GSC10 is only recorded and used for distance calculation when GPS signal is weak or GPS is turned off.

For information about setting and using cadence alerts, see [page 27](#).

Barometric Altimeter

The Edge 305 contains a barometric altimeter for extremely accurate elevation and vertical profile data.

Press **mode** to view the Altimeter page. Once you start the timer and begin to move, a black line, shaded gray below, appears on the page, plotting elevation during your ride. At the bottom of the page, you can view the zoom level. To zoom in or out on the page, press the ▲ and ▼ **arrows**. At the top of the map page, your elevation and total ascent data appears.

NOTE: You cannot customize the data fields on the Altimeter page.

Garmin Training Center

The Garmin Training Center software is included in the Edge product box. Locate the Training Center CD and use it to install Training Center on your personal computer.

Training Center software allows you to overlay your ride data onto a map. It offers interactive analysis tools that measure your speed, distance, climb, and descent against varying terrain, elevation and more. Create and schedule custom courses and workouts or use workout templates and download them to the Edge.

To install Training Center:

1. Insert the Training Center CD into your computer's CD-ROM drive. Your computer should automatically run the start-up file and display a welcome screen.
2. If the welcome screen does not appear, click **Start** and then click **Run....** Type in the drive letter of your CD-ROM drive followed by "setup" (example: D:\setup). Then press **Enter**.
3. When the welcome screen appears, click **Install Training Center**. Then click **Next**.
4. Click **I accept the terms of the license agreement**. Then click **Next**.

5. Click **Next** to accept the default file location.
6. Click **Install**.
7. Wait while necessary files are saved to your computer. When the InstallShield Wizard Complete screen appears, click **Finish**.

Now you can begin using Training Center. Use the USB cable from the product box to connect your Edge to your computer. Then open Training Center. For help using Training Center, click the **Help** menu and select **Contents**, or press **F1** on your keyboard.

Caring for the Edge

The Edge is constructed of high quality materials and does not require user maintenance other

than cleaning. Clean the unit and the heart rate monitor using a cloth dampened with a mild detergent solution and then wipe dry. Avoid chemical cleaners and solvents that may damage plastic components.

Storage

Do not store the Edge where prolonged exposure to temperature extremes may occur (such as in the trunk of a car), as permanent damage may result. User information, such as workout history, locations, and tracks, is retained indefinitely in the unit's memory without the need for external power. It is always a good practice to back up important user data by manually recording it or downloading it to a personal

computer. PC software for the Edge is included in the product box.

Water Immersion

The Edge is waterproof to IEC Standard 60529 IPX7. It can withstand immersion in 1 meter of water for 30 minutes. Prolonged submersion can cause damage to the unit. After submersion, be certain to wipe dry and air dry the unit before using or charging.

Specifications

Physical

Case: Fully-sealed, high-impact plastic alloy, waterproof to IEC 60529 IPX7 standards (waterproof to 1 m for 30 minutes)

Size: 1.75" W x 3.7" H x 0.9" D
(44 mm x 94 mm x 23 mm)

Weight: Approx. 88 g

Display: 128 x 160 pixels, 1.17" W x 1.44" H (29.65 mm x 36.69 mm)

Antenna: Internal patch

Power

Input: 910 mAh rechargeable, built-in, lithium-ion battery

Battery Life: 12 hours, typical use

Performance

Receiver: High-sensitivity integrated GPS receiver by SiRF

Acquisition Time:

Hot Start: < 1 second

Warm Start: < 38 seconds

Cold Start: < 45 seconds

Update Rate: 1/second, continuous

GPS Position Accuracy*:

< 10 meters 50%, typical

GPS Velocity Accuracy*:

< 0.05 m/s

Dynamics: Performs to specifications to 6 g's

Operating Temperature Range:

-4° F to 140° F (-20° C to 60° C)

*Accuracy depends on view of the sky. 99%—clear view; 95%—typical.

Heart Rate Monitor

Physical size (WxHxD): 13.7" x 1.4" x 0.5"

Transmission range:

approximately 3 m

Battery: CR2032 (3 volts)

Battery life: approximately 3 years (1 hour per day)

Weight: 21 g

Accuracy may be degraded by poor sensor contact, electrical interference, and receiver distance from transmitter.

GSC10 Speed and Cadence Sensor

Physical size (WxHxD): 2.0" x 1.2" x 0.9" (not including adjustable speed sensing arm)

Transmission range: approximately 3 m

Battery: CR2032 (3 volts)

Battery life: approximately 1.4 years (1 hour per day)

Weight: 25 g

NOTE: *Specifications subject to change without notice.*

Replacing the Battery

The heart rate and GSC10 monitors contain a user-replaceable CR2032 battery. Be sure to dispose of the used battery properly. To replace the battery, locate the circular battery cover on the back of the heart rate monitor or the side of the GSC10. Use a coin to twist the cover counter-clockwise until it is loose enough to remove. Remove the cover and replace the battery. Be careful not to damage or lose the o-ring gasket on the cover. Then use a coin to twist the cover back into place.

Product Registration

Help us better support you by completing our online registration today! Have the serial number of your Edge handy and connect to our Web site (www.garmin.com). Look for the Product Registration link on our home page.

Use this area to record the serial number (8-digit number located on the back of the unit) in case your Edge is lost, stolen, or needs service. Be sure to keep your original sales receipt in a safe place or attach a photocopy inside the manual.

Serial Number: ____ ____ ____

____ ____ ____ ____ ____

Contact Garmin

If you should encounter any difficulty while using your Edge, or if you have any questions, in the U.S.A. contact Garmin Product Support by phone: 913/397.8200 or 800/800.1020, Monday–Friday, 8 am–5 pm Central Time; or by e-mail at sales@garmin.com.

In Europe, contact Garmin (Europe) Ltd. at 44/0870.8501241.

Tell us how you like this manual! Fill out the Product Documentation Survey. Go to <http://www.garmin.com/contactUs/> and click **Product Documentation Survey**.

Safety Information



Warning

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When navigating, carefully compare information displayed on the Edge to all available navigation sources, including information from visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

The Edge contains a non-user-replaceable, rechargeable lithium-ion battery. The GSC10 and heart rate monitor contain a replaceable CR2032 battery. The batteries may present a risk of fire or chemical burn if mistreated.

- Do not recharge out of the unit, disassemble, heat above 140°F (60°C), or incinerate.
- Keep used battery away from children.
- Dispose of used battery or unit

properly. Contact your local waste disposal department for information on properly disposing of lithium-ion batteries.

This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our Web site at www.garmin.com/prop65.

The Edge has no user-serviceable parts. Should you ever encounter a problem with your unit, please take it to an authorized Garmin dealer for repairs.

Always consult your physician before beginning or modifying any exercise program. If you have a pacemaker or other implanted electronic device, consult your physician prior to using a heart rate monitor.



Caution

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

Use the Edge only as a navigational aid. Do not attempt to use the Edge for any purpose requiring precise measurement of direction, distance, location, or topography. This product should not be used to determine ground proximity for aircraft navigation.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government's system is subject to changes which could affect the accuracy and performance of all GPS equipment, including the Edge. Although the Edge is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

The Edge, heart rate monitor, and GSC10 speed and cadence sensor are consumer devices, not medical devices, and could suffer from interference from external electrical sources. The heart rate readings are for reference only and no responsibility can be accepted for the consequences of any erroneous readings.

Use the Edge at your own risk. To reduce the risk of unsafe operation, carefully review and understand all aspects of this *Owner's Manual*. When in actual use, carefully compare indications from the Edge to all available navigation sources, including information from other NAVAIDs, visual sightings, charts, etc. For safety, always resolve any discrepancies before continuing navigation.

Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will at its sole option repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC

LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. The unit should be securely

packed with the tracking number clearly written on the outside of the package. The unit should then be sent, freight charges prepaid, to any Garmin warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs.

Garmin International, Inc.
Tel. 913/397.8200, Fax. 913/397.8282

Garmin (Europe) Ltd.
Tel. 44/0870.8501241, Fax
44/0870.8501251

Online Auction Purchases: Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

International Purchases: A separate warranty is provided by international

distributors for units purchased outside the United States. This warranty is provided by the local in-country distributor, and this distributor provides local service for your unit. Distributor warranties are only valid in the area of intended distribution. Units purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

The Edge is fastened shut with screws. Any attempt to open the case to change or modify the unit in any way will void your warranty and may result in permanent damage to the equipment.

FCC Compliance

The Edge complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more

stringent than “outdoor” requirements.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Edge does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under Part 15 regulations.

Software License Agreement

BY USING THE EDGE, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

 
Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.


You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade


secret of Garmin. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

CE Compliance

Hereby, Garmin International, declares that this GPS equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

GARMIN	
Issued: 14/12/2005 Revised: 30/12/2005 Page: 1 of 1	
DECLARATION of CONFORMITY	
Application of Council Directive:	73/23/EEC, 89/336/EEC, 1999/5/EC
Standard to which Conformity is Declared:	EN 55022:1998 (CISPR 22) Information Technology Equipment EN 61000-6-2:2001 Electromagnetic Compatibility – Electromagnetic Discharge Immunity EN 61000-6-3:2001 Electromagnetic Compatibility – Radiated, Radio Frequency Immunity EN 60950-1:2001 Safety of Information Technology Equipment EN 301 403-3: Electromagnetic Compatibility and Radio Spectrum Matters - Short Range Devices
Manufactured by:	GARMIN International & GARMIN Corporation
Manufacturer's Address:	1200 E. 151 st Street No.68, Jangshu 2 nd Rd, Olathe, Kansas 66062 Ship, Taipei County, U.S.A TAIWAN, R.O.C.
Authorized Representative:	GARMIN (Europe) Ltd, The Quadrangle, Abbey Park Ind. Estate, Romsey, Hampshire, SO51 9DL, U.K.
Type of Equipment:	Information Technology Equipment (Global Positioning System Receiver)
Model Number(s):	EDGE 205 EDGE 305
The undersigned does hereby declare that the equipment complies to the above Directives	
Paul Morrow Quality Manager GARMIN (Europe) Ltd	 Date: 30/12/2005

GARMIN	
Issued: 3/12/2005 Revised: 3/12/2005 Page: 1 of 1	
DECLARATION of CONFORMITY	
Application of Council Directive:	89/336/EEC, 1999/5/EC
Standard to which Conformity is Declared:	EN 60950-1:2001 EN 300 448-1 V1.3.1 (2001-09) EN 301 489-1 V1.5.1 (2004-07) EN 301 489-3 V1.4.1 (2002-08) 47 CFR 15.249 RSS-210 (A2.9)
Manufactured by:	GARMIN International & GARMIN Corporation
Manufacturer's Address:	1200 E. 151 st Street No.68, Jangshu 2 nd Rd, Olathe, Kansas 66062 Ship, Taipei County, U.S.A TAIWAN, R.O.C.
Authorized Representative:	GARMIN (Europe) Ltd, The Quadrangle, Abbey Park Ind. Estate, Romsey, Hampshire, SO51 9DL, U.K.
Type of Equipment:	Low Power Unlicensed Transmitter
Model Number(s):	IRBM1
The undersigned does hereby declare that the equipment complies to the above Directives	
Paul Morrow Quality Manager GARMIN (Europe) Ltd	 Date: 3 rd December 2005

 GARMIN		Issued: 14/12/2005
		Revised: 30/12/2005
		Page: 1 of 1
 DECLARATION of CONFORMITY		
 Application of Council Directive: 73/23/EEC, 89/336/EEC, 1999/5/EC		
Standard to which Conformity is Declared:	EN 55022:1998 (CISPR 22) Information Technology Equipment EN 61000-4-2:2001 Electromagnetic Compatibility – Electrostatic Discharge Immunity EN 61000-4-3:2001 Electromagnetic Compatibility – Radiated Radio Frequency Immunity EN 60950-1:2001 Safety of Information Technology Equipment EN 301 400-3: Electromagnetic Compatibility and Radio Spectrum Matters – Short Range Devices EN 300 440-2: Electromagnetic Compatibility and Radio Spectrum Matters – Short Range Devices	
Manufactured by:	GARMIN International & GARMIN Corporation	
Manufacturer's Address:	1200 E. 151 st Street No. 68, Jangshu 2 nd Rd., Oshaka, Kansas 66062 Shipu, Taipei County, U.S.A. TAIWAN, R.O.C.	
Authorized Representative:	GARMIN (Europe) Ltd, The Quadrangle, Abbey Park Ind. Estate, Romsey, Hampshire, SO51 9EL, U.K.	
Type of Equipment:	Information Technology Equipment (Global Positioning System Receiver)	
Model Number(s):	GSC 10	
The undersigned does hereby declare that the equipment complies to the above Directives		
Paul Morrow Quality Manager GARMIN (Europe) Ltd		
 Date: 30 th December 2005		

INDEX

A

- accessories 69
- advanced workouts 34
 - creating 35, 39
 - editing 38
 - starting 37
- alerts 24
 - cadence 27
 - distance 24
 - heart rate 26
 - speed 25
 - time 24
- altimeter 75
- AutoPause/Lap 22
- Auto Timer Pause 23

B

- backlight 21, 56
 - turning on and off 8
- barometric altimeter 75

battery

- charging 6
- GSC10 80
- heart rate monitor 80
- lithium-ion 6
- replacing 80
- battery icon 9
- bike profile 20
- buttons 8

C

- cadence
 - alerts 27
 - icon 9
 - sensor 20
 - training 75
- charging the battery 6
- cleaning and care 77
- configure the Edge 12
- contact Garmin 81
- contrast 21, 56
- courses 39
 - creating 39
 - deleting 41

- editing 40
- starting 40
- custom pages 53

D

- data fields 53, 63
- data recording 62
- daylight saving time 58
- distance alert 24

E

- enter button 9

G

- GPS 52
 - turning on and off 55
- GSC10 16, 75
 - pairing 73
 - replacing the battery 80

H

- heart rate
 - alert 26
 - icon 9

- zones 26, 60, 70
- heart rate monitor
 - pairing 15, 73
 - positioning 14
 - replacing the battery 80
 - viewing data 70

- history
 - deleting 44, 45
 - totals 45
 - viewing 42
 - viewing laps 43

I

- icons 9
- indoor use 55
- installation
 - Edge 10
 - GSC10 16
 - heart rate monitor 14
- interval workouts 33

L

- language 55

- lap button 8
- locations 47
 - deleting 49
 - editing 49
 - finding 47
 - marking 47
 - navigating to 47

M

- map 46
 - zooming 46, 75
- map orientation 56
- maximum heart rate 60
- mode button 8

N

- navigation 46

P

- pairing 73
- pedal magnet 17
- power button 8
- product support 81

Q

- quick workouts 30

R

- register your product 81
- reset button 8
- reset Edge 9
- rest time 22
- routes 49
 - creating 49
 - deleting 51
 - finding 50

S

- safety information 82
- satellite icon 9
- Satellite page 51
- satellite signals
 - acquiring 13
- serial number 81
- setup screens 12
- Smart Recording 62
- specifications 78
- speed alerts 25

speed zones 59
 and alerts 25
spoke magnet 17
storage 77

T

time
 changing 58
timer icon 9
time alert 24
time zone 58
 setting 19
tones 55
Training Center 34, 35,
 38, 39
 installing 76
training features 22

U

up and down buttons 9
USB 6, 77
user profile
 setting 19

V

viewing history 42
Virtual Partner 28

W

waterproof 78
workouts 30

**For the latest free software updates (excluding map data)
throughout the life of your Garmin products, visit the Garmin
Web site at www.garmin.com.**



© Copyright 2005–2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate,
Romsey, SO51 9DL, U.K.

Garmin Corporation
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

Part Number 190-00580-00 Rev. B